

# List of Parts Symbols

- For supported model numbers, see the corresponding table of options by model number on **A1-506**.
- For the overall block length (dimension L) of each model with seal options attached, see **A1-519** to **A1-527**.
- For the LM block dimension (L dimension) with a QZ Lubricator attached, see **A1-541** to **A1-544**.

## Symbols for Seals and Metal Scraper

Symbol	Configuration of seal and metal scraper
No Symbol	Without seal
UU	With end seal
SS	With end seal + side seal + inner seal*
DD	With double seals + side seal + inner seal*
ZZ	With end seal + side seal + inner seal* + metal scraper
KK	With double seals + side seal + inner seal* + metal scraper

\* Some models are not equipped with inner seals.(See **A1-506**)

## Symbols for QZ Lubricator and Laminated Contract Scraper LaCS

Symbol	Configuration of options	Example
* * HH	(Seal or metal scraper) + LaCS	UUHH
* * HHYY	(Seal or metal scraper) + LaCS + side scraper	DDHHYY
QZ * *	With QZ + (seal or metal scraper)	QZZZ
QZ * * HH	With QZ + (seal or metal scraper) + LaCS	QZZZHH
QZ * * HHYY	With QZ + (seal or metal scraper) + LaCS + side scraper	QZKKHHYY

Note1) \* \* in the table represents the symbol for a seal and metal scraper.

Note2) Grease nipples are not installed when there is a QZ Lubricator. Contact THK if you want to use a grease nipple for a model with a QZ.

## Symbols for Light-Resistance Contact Seal LiCS

Symbol	Configuration of options
GG	LiCS
PP	With LiCS + side seal + inner seal*
QZGG	With QZ + LiCS
QZPP	With QZ + LiCS + side seal + inner seal*

\* Some models are not equipped with inner seals.(See **A1-506**)

Note) Grease nipples are not installed when there is a QZ Lubricator. Contact THK if you want to use a grease nipple for a model with a QZ.

## Symbols for High Chemical Resistance Fluorine Seal FS

Symbol	Configuration of options
F2	With fluorine seal + side seal + inner seal
FZ2	With fluorine seal + side seal + inner seal + metal scraper
FJ2	With fluorine seal + side seal + inner seal + protector
F4	With fluorine seals (double) + side seal + inner seal
FZ4	With fluorine seals (double) + side seal + inner seal + metal scraper
FJ4	With fluorine seals (double) + side seal + inner seal + protector
QZF2	With fluorine seal + side seal + inner seal + QZ
QZFZ2	With fluorine seal + side seal + inner seal + metal scraper + QZ
QZFJ2	With fluorine seal + side seal + inner seal + QZ + protector
QZF4	With fluorine seals (double) + side seal + inner seal + QZ
QZFZ4	With fluorine seals (double) + side seal + inner seal + metal scraper + QZ
QZFJ4	With fluorine seals (double) + side seal + inner seal + QZ + protector

## Symbols for Protector

\* Supported models: SVR/SVS, NR/NRS, NR-X/NRS-X, SRG, and HRX

Symbol	Configuration of options
JJHH	With end seal + side seal + inner seal* + LaCS + protector (serves also as a metal scraper)
TTHH	With double seals + side seal + inner seal* + LaCS + protector (serves also as a metal scraper)
JJHHYY	With end seal + side seal + inner seal* + LaCS + protector (also has a metal scraper function) + side scraper*
TTHHHY	With double seals + side seal + inner seal* + LaCS + protector (also has a metal scraper function) + side scraper*
QZJJHH	With QZ + end seal + side seal + inner seal* + LaCS + protector (serves also as a metal scraper)
QZTTHH	With QZ + double seals + side seal + inner seal* + LaCS + protector (serves also as a metal scraper)
QZJJHHYY	With QZ + end seal + side seal + inner seal* + LaCS + protector (also has a metal scraper function) + side scraper*
QZTTHHHY	With QZ + double seals + side seal + inner seal* + LaCS + protector (also has a metal scraper function) + side scraper*

\* Some models are not equipped with inner seals or side scrapers. (See **A1-506**)



Note1) For models SVR/SVS, NR/NRS, NR-X/NRS-X, SRG, and HRX with HH specifications (with LaCS), a protector (**A1-515**) can be installed. The protector also acts as a metal scraper.  
Contact THK if you want to use the protector with other options.

Note2) Grease nipples are not installed when there is a QZ Lubricator. Contact THK if you want to use a grease nipple for a model with a QZ.

## Options

## List of Parts Symbols

## QZKKHH

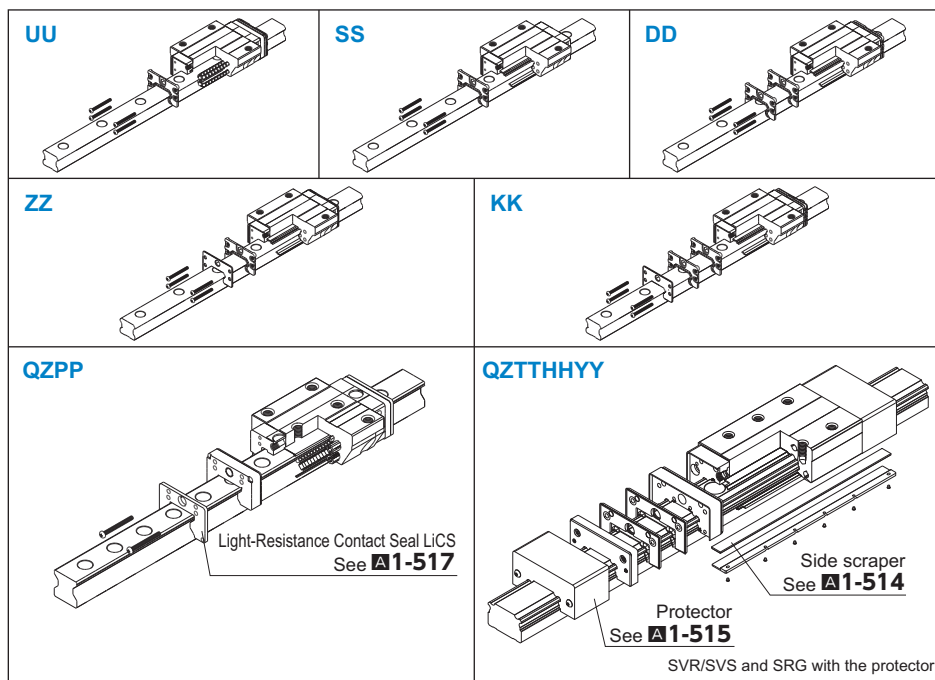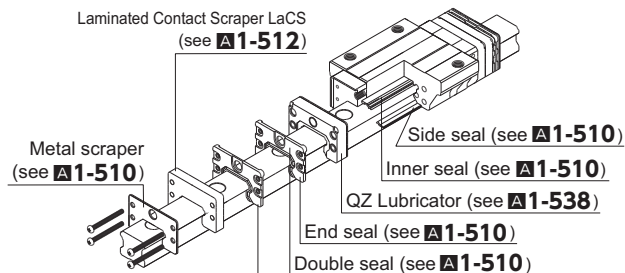

## Model number coding

SVR45 LR 2 QZ TTHH C0 +1200L P T - II

With QZ      Symbol for  
Lubricator    dust-proof accessory

Note) Grease nipples are not installed when there is a QZ Lubricator. Contact THK if you want to use a grease nipple for a model with a QZ.