

End Piece EP

For models that can use the end piece, see the table below.
 If removing the end piece when using the LM Guide, be sure that the LM block will not overshoot the rail.
 The end piece can also be used as a fixing jig for steel tape protectors, and can also be used on LM rails of models SSR, SR, and HSR.

Table 1: Dimensional Table for End Piece EP for Models NR/NRS
 Unit: mm

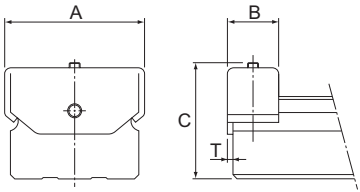


Fig. 1: End Piece EP for Models NR/NRS

Model No.	A	B	C	T
NR/NRS 25X	26	14	25	1.5
NR/NRS 30	31	14	31	1.5
NR/NRS 35	38	16	32.5	2
NR/NRS 45	49	18	41	2
NR/NRS 55	57	20	46.5	2
NR/NRS 65	69.4	22	59	3.2
NR/NRS 75	81.7	28	56	3.2
NR/NRS 85	91.4	22	68	3.2
NR/NRS 100	106.4	25	73	3.2