


SKR46 Without Cover, Motor Wrap

Model SKR46□□A (with a Single Long Block)

Model SKR46□□B (with Two Long Blocks)

For model number coding, see **A2-28**.

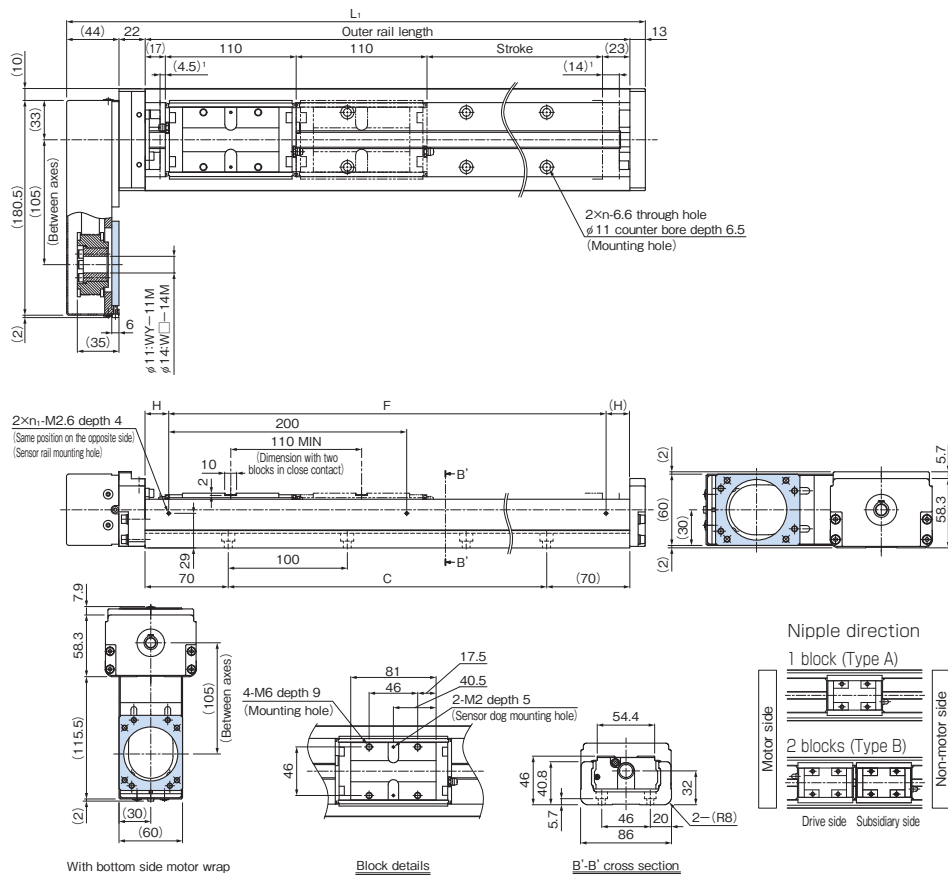

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B¹								Type A	Type B
190 (208.5)	80 (98.5)	340	419	200	200	70	3	2	7.7	8.7
290 (308.5)	180 (198.5)	440	519	300	400	20	4	3	9.1	10.1
390 (408.5)	280 (298.5)	540	619	400	400	70	5	3	10.5	11.5
490 (508.5)	380 (398.5)	640	719	500	600	20	6	4	11.9	12.9
590 (608.5)	480 (498.5)	740	819	600	600	70	7	4	13.3	14.3
690 (708.5)	580 (598.5)	840	919	700	800	20	8	5	14.7	15.7
790 (808.5)	680 (698.5)	940	1,019	800	800	70	9	5	16.1	17.1


¹ Indicates a value when two inner blocks are in close contact with each other.

SKR46 With Cover, Motor Wrap

Model SKR46□□A (with a Single Long Block)

Model SKR46□□B (with Two Long Blocks)

For model number coding, see **A2-28**.

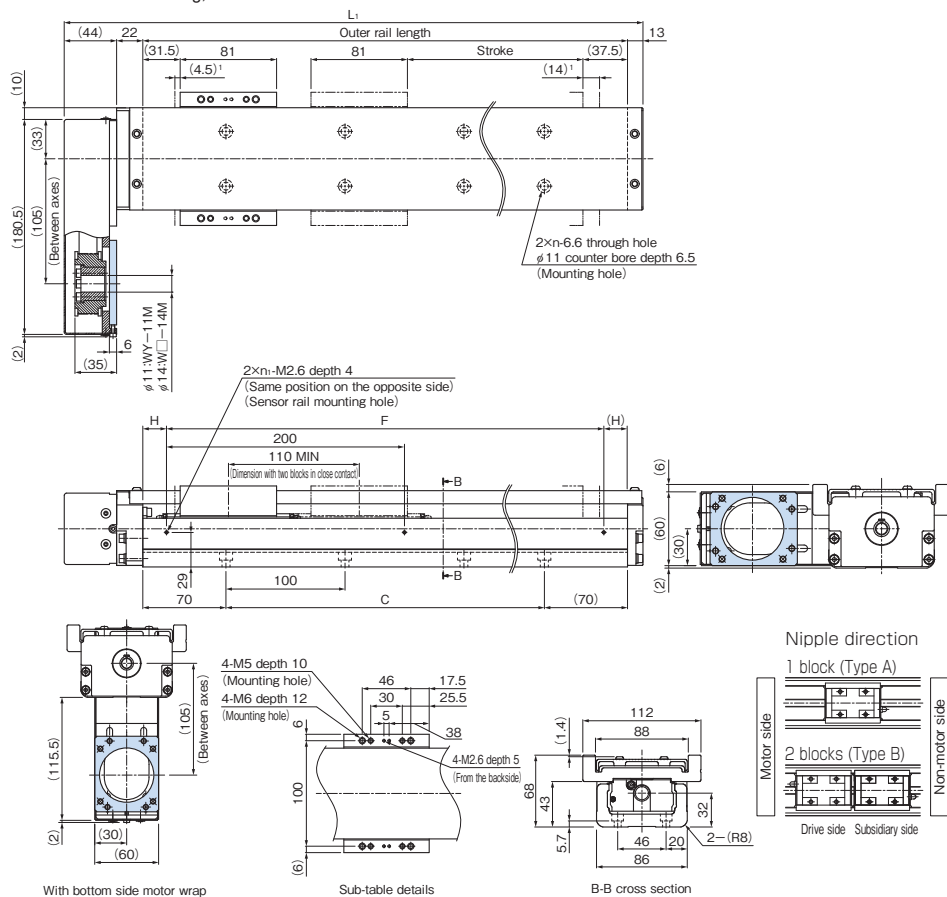

With bottom side motor wrap

Sub-table details

B-B cross section

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B ¹								Type A	Type B
190 (208.5)	80 (98.5)	340	419	200	200	70	3	2	8.6	10
290 (308.5)	180 (198.5)	440	519	300	400	20	4	3	10.1	11.5
390 (408.5)	280 (298.5)	540	619	400	400	70	5	3	11.6	13
490 (508.5)	380 (398.5)	640	719	500	600	20	6	4	13.1	14.5
590 (608.5)	480 (498.5)	740	819	600	600	70	7	4	14.6	16
690 (708.5)	580 (598.5)	840	919	700	800	20	8	5	16.1	17.5
790 (808.5)	680 (698.5)	940	1,019	800	800	70	9	5	17.6	19

¹ Indicates a value when two inner blocks are in close contact with each other.